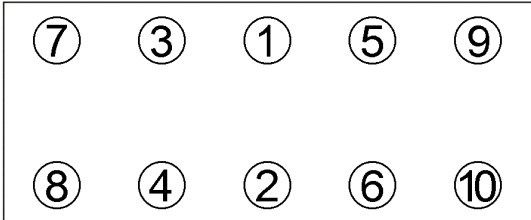


Anziehvorschrift für Zylinderkopf		722.502 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
T60, T50  E12 			
Anziehen/ Tightening/ Serrage/ Apriete * * ➤ ➤ M11/M10x173: 30 Nm M9x30/M9x70: 22 Nm M11/M10x173: 90° M11/M10x173: 180°			
Zeichenerklärung / Explanations / Explication / Explicacion			
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Mot. N20/N26 B20 ±1,0mm (+0,3) F20/F21 125i F22 220i,228i F30/F31/F34/F35 320i,iX, 328i,iX F32/F33 420i,iX, 428i,iX F07/F10/F11/F18 520i, 528i,iX E84 X1 16i, 20i,iX, 28i,iX F25 X3 20iX, 28iX E89 Z4 18i, 20i, 28i			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*722.502*	