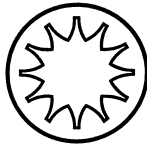
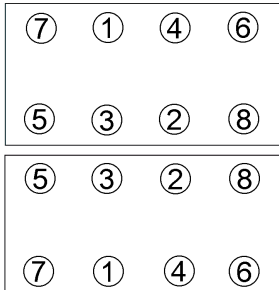


Anziehvorschrift für Zylinderkopf			735.430		 Das Original									
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a											
Instructions de serrage pour culasse														
Prescripciones de apriete para culatas														
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete											
 130.110 M 12x1,5x159														
Anziehen/ Tightening/ Serrage/ Apriete			* 35 Nm 60 Nm ➤ 90° ➤ 90°											
Zeichenerklärung / Explanations / Explication / Explicacion														
			neue Zylinderkopf-schrauben verwenden			use new cylinder head bolts			utiliser des vis neuves			emplar tornillos nuevos		
			Warmlauf (80°C)			warm up time (80°C)			chauffage (80°C)			calentamiento (80°C)		
			Schrauben einzeln lösen und wieder anziehen			loosen and tighten each bolt			deserrer et serrer vis par vis			aflojar y apretar tornillo a tornillo		
			Setzzeit			relaxation time			durée de tassement			tiempo de espera		
			Drehwinkel			torque angle			angle de serrage			ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor														
Ø 84 mm ✚ 1,15 mm Cyl. 1-3														
Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA, CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB, CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB														
A4, A5, A6, A8, Q5, Q7 Phaeton, Touareg														
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601						*735.430*								