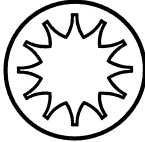
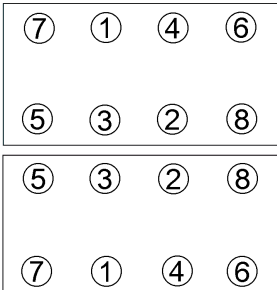


Anziehvorschrift für Zylinderkopf			735.500		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 130.110 M 12x1,5x159					
Anziehen/ Tightening/ Serrage/ Apriete			* 35 Nm 60 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
 neue Zylinderkopf-schrauben verwenden			use new cylinder head bolts		
 Warmlauf (80°C)			warm up time (80°C)		
 Schrauben einzeln lösen und wieder anziehen			loosen and tighten each bolt		
 Setzzeit			relaxation time		
 Drehwinkel			torque angle		
 neue Zylinderkopf-schrauben verwenden			utiliser des vis neuves		
 Warmlauf (80°C)			chauffage (80°C)		
 Schrauben einzeln lösen und wieder anziehen			deserrer et serrer vis par vis		
 Setzzeit			durée de tassement		
 Drehwinkel			angle de serrage		
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø 84 mm  1,2 mm Cyl. 4-6					
Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA, CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB, CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB					
A4, A5, A6, A8, Q5, Q7 Phaeton, Touareg					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*735.500*		