



Anziehvorschrift für Zylinderkopf		736.271 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

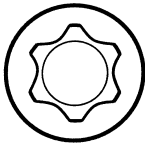

469.830
M12x179x1,5

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

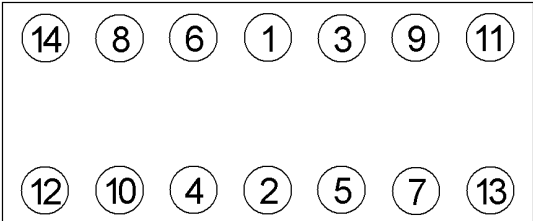

Anziehen/ Tightening/ Serrage/ Apriete	* 50 Nm ☐ 180° 50 Nm ➤ 120° ➤ 120°
---	---

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 Mot. N57S1 D30 ✱ 1,675mm
 F10/F11 M550dX
 F01/F02 750dX, LdX
 E70 X5 M50dX
 E71 X6 M50dX
 3 Löcher, holes, trous, agujeros, foro

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*736.271*
--	------------------