

Anziehvorschrift für Zylinderkopf		766.624		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Saab			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
A B		⑧ ④ ① ⑤ ⑨ ⑦ ③ ② ⑥ ⑩			
Anziehen/ Tightening/ Serrage/ Apriete	HEX 15 mm, TORX bis 1988< * 60 Nm 80 Nm ★ 15 min ● 30 min □ 80 Nm ➤ 90°	HEX 15 mm, TORX ab 1988> * 60 Nm 80 Nm ➤ 90°	HEX 17 mm * 60 Nm 95 Nm ★ 15 min ● 30 min □ 95 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion					
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Mot. B 212, 4 Cyl., 2,1 l 16 V,					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*766.624*		