

Anziehvorschrift für Zylinderkopf
Tightening Instructions for Cylinder Head
Instructions de serrage pour culasse
Prescripciones de apriete para culatas

792.700




passend für / suitable for
adaptable à / adaptable a
Subaru



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

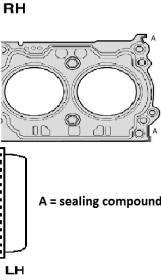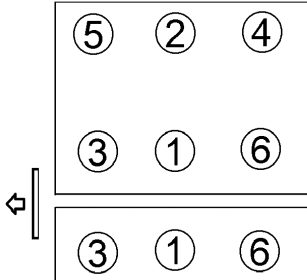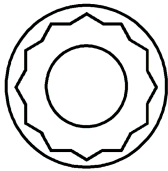

A = sealing compound

- Anziehen/ Tightening/ Serrage/ Apriete
- * 29 Nm
 - 100 Nm
 - loosen 180°
 - loosen 180°
 - 42 Nm
 - 80° ± 2°
 - bolt 1 & 2: 75° ± 2°
 - bolt 3-6: 30° ± 2°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2.5 Ltr. CVT

Mot.: FB25
Ø: 95,60 mm / 0,40:±2 mm
mounting position: left

Forester, Outback, Legacy

ElingKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

792.700