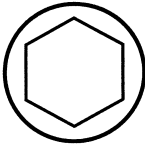


Anziehvorschrift für Zylinderkopf		798.210		Das Original																
Tightening Instructions for Cylinder Head																				
Instructions de serrage pour culasse																				
Prescripciones de apriete para culatas																				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																		
		<table><tr><td>⑦</td><td>①</td><td>③</td><td>⑤</td></tr><tr><td>⑥</td><td>④</td><td>②</td><td>⑧</td></tr><tr><td>⑥</td><td>④</td><td>②</td><td>⑧</td></tr><tr><td>⑦</td><td>①</td><td>③</td><td>⑤</td></tr></table>			⑦	①	③	⑤	⑥	④	②	⑧	⑥	④	②	⑧	⑦	①	③	⑤
⑦	①	③	⑤																	
⑥	④	②	⑧																	
⑥	④	②	⑧																	
⑦	①	③	⑤																	
267.660 M 11x1,25x123																				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	98 Nm 40 Nm 93° +/- 3° 93° +/- 3°																		
Zeichenerklärung / Explanations / Explication / Explicacion																				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro																
Motortyp / Engine type / Type de moteur / Tipo de motor																				
CHG right side Mot: 2ZV 2,5 ltr. 130-140 kW (177-190 PS) Renault Latitude																				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*798.210*																		