

Anziehvorschrift für Zylinderkopf		828.254 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 707.650 M 12 x 107			
Anziehen/ Tightening/ Serrage/ Apriete		* 20 - 26 Nm 50 - 56 Nm 80 - 86 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ►	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 87,5 mm Mot: F2, F21, F2E, F8, FE, FE (12V) 1,8-2,2 ltr., 60-108 kW (82-147 PS) Probe I, Sportage, 626 III, 929 III, E 2000/2200			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*828.254*	