

Anziehvorschrift für Zylinderkopf		828.913		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Opel Das Original		
		10 6 2 3 7 9 5 1 4 8		
820.458 M 11 x 140				
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
Anziehen/ Tightening/ Serrage/ Apriete		18 SV/18 SEH	E 18 NV/E 18 NVR S 18 NV	C 18 NZ
✱ 25 Nm		✱ 25 Nm	✱ 25 Nm	
➤ 60°		➤ 60°	➤ 90°	
➤ 60°		➤ 60°	➤ 90°	
➤ 60°		➤ 30°	➤ 90°	
★ 15 min		★ 15 min		
➤ 30°		➤ 30°		
		➤ 15°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. 1,8 l 18 SV / 18 SEH E 18 NV / E 18 NVR S 18 NV / C 18 NZ C 18 LE				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*828.913*	