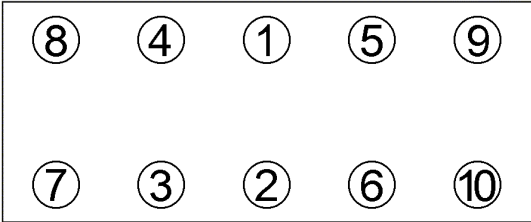


Anziehvorschrift für Zylinderkopf		828.998	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a PSA	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 758.230 M 12 x 123			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 60 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
82 mm Ø, 1,54 mm ÷, 2 Kerben			
Mot. XUD 7T/TE, 1769 ccm, 66 kW (90 PS)			
BX 18 Turbodiesel 205 Turbodiesel 309 Turbodiesel			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*828.998*	