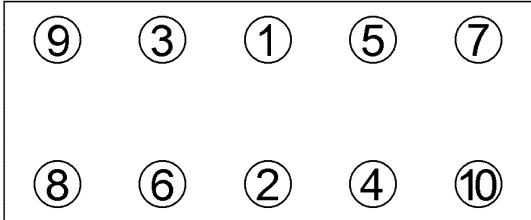


Anziehvorschrift für Zylinderkopf		864.250 passend für / suitable for adaptable à / adaptable a Honda	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 022.590 M 10 x 1,25 x 120				
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 49 Nm 67 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ÷ 0,70 mm Ø 75,9 mm Civic IV Accord VII EJ6, 1,6i, Mot.D16Y7 Mot. D16B6 10/1998> Civic V EJ9,MB8,MB2 1,4i, Mot.D14A3/A4/A7/A8 EK3, 1,5i, Mot.D15Z6 EK1 1,6i, Mot. D16Y5				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*864.250*		