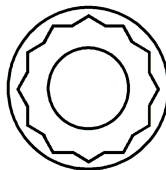
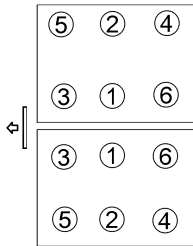
 


Anziehvorschrift für Zylinderkopf		878.050		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Subaru		
		Das Original		
	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
	 			
Anziehen/ Tightening/ Serrage/ Apriete	* 29 Nm 100 Nm ➤ loosen 180° ➤ loosen 180° 42 Nm ➤ 80° ±2° ➤ 1 & 2 = 75° ±2° ➤ 3-6 = 30° ±2°			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
2.0L 16V DOHC Boxer				
Mot: FB20				
assembly position: right				
10/2011 ->				
※: 0,40 mm / Ø:85,6 mm				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*878.050*	