

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

878.060

passend für / suitable for
adaptable à / adaptable a


Subaru



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

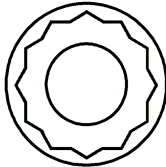

⑤ ② ④

③ ① ⑥

 
③ ① ⑥

⑤ ② ④

LH

A

RH



A= Dirkol Silicone Sealing Compound

Anziehen/
Tightening/
Serrage/
Apriete

*

➤

➤

➤

➤

➤

29 Nm

100 Nm

loosen 180°

loosen 180°

42 Nm

80° ±2°

1 & 2 = 75° ±2°

3-6 = 30° ±2°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2.0L 16V DOHC Boxer

Mot: FB20

assembly position: left

10/2011 ->

✚: 0,40 mm / Ø:85,6 mm

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

878.060