

Anziehvorschrift für Zylinderkopf			896.691		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a Ford		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A B  802.860 M 12 x 95			9 3 1 5 7 8 6 2 4 10		
Anziehen/ Tightening/ Serrage/ Apriete			B		
* 40 - 55 Nm 50 - 70 Nm ● 15 min 73 - 83 Nm ★ 15 min 95 - 115 Nm			* 35 - 40 Nm 70 - 75 Nm ● 5 min ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
87, 6 Ø					
Mot. TL16L, TL61H, TL16 G, 4 Cyl., 1,6 l OHC 46/55/65 kW (63/75/90 PS)					
Capri, Cortina, Taunus, Sierra, Granada,					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*896.691*		