

Anziehvorschrift für Zylinderkopf		903.540 passend für / suitable for adaptable à / adaptable a R.V.I.	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
22 19 18 11 10 3 2 7 8 15 16 25 21 17 9 1 6 14 24 20 12 4 5 13 23				
Anziehen/ Tightening/ Serrage/ Apriete ➤ 125 Nm ➤ 180° ☐ 360° ➤ 125 Nm ➤ 180°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot: MIDR 06.02.26 D/H/Q/U/V/W/X				
6,2 ltr. 110-166 KW (150-226 PS)				
Renault: G 200;230;/ Manager G 200;210;230				
Maxter G 230/ Midliner M 150;180;				
200;210;230/ Midliner S 150;180;210				
220/ Midlum 180;210				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*903.540*		