

Anziehvorschrift für Zylinderkopf		915.591 passend für / suitable for adaptable à / adaptable a	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 819.817 M 11x1,5x96				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	40 Nm 60 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø 83,5 mm $\frac{1}{8}$ 1,75 mm Mot.: 2E, 3A, 9A, AAD, AAE, ABF, ABK, ABT, ACE, ADL, ADW, SD 1,8/2,0 Ltr. Corrado, Golf, Passat, Vento, Audi 80/100, Cordoba Ibiza, Toledo				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*915.591*	