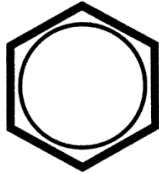
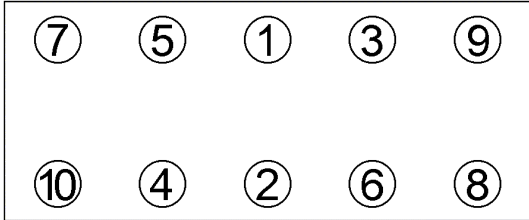


Anziehvorschrift für Zylinderkopf		919.950 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 802.940 7/16 - 135				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 - 30 Nm ● 76 - 92 Nm ● 3 min ► 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83,8; ⚙: 1,42 mm 3 Zähne/teeth/dents				
Mot. RFA;RFB;RFD;RFK;RFL;RTA;RTB;RTC;RTD RTE;RTF;RTG;RTH 1,8 ltr. 43-66 KW (58-90 PS)				
Fiesta, Escort, Orion, Sierra →1992				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*919.950*	