

Anziehvorschrift für Zylinderkopf		920.525 passend für / suitable for adaptable à / adaptable a Toyota	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
13 8 10 6 4 12 1 2 11 3 5 9 7				
Anziehen/ Tightening/ Serrage/ Apriete	M14 30 Nm 60 Nm 88 Nm	M12 * 19 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 88,0 mm Ø Toyota F-Model 1,8ltr.+2,0ltr. 11/1982-01/1990 Toyota HIACE II 1,8ltr.+2,0ltr. 3/1983-11/1989 Toyota HILUX 1,8ltr.+2,0ltr. 01/1984-12/1986 Daihatsu Rocky 2,0 ltr. 02/1985-04/1993				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*920.525*		