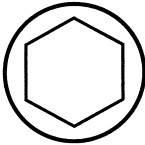
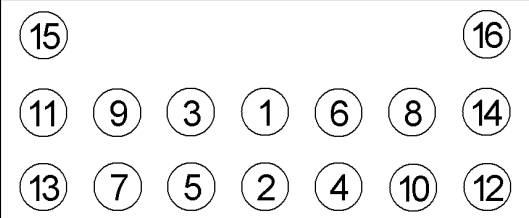


Anziehvorschrift für Zylinderkopf		920.542		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Nissan		
		Das Original		
 710.100 Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 				
Anziehen/ Tightening/ Serrage/ Apriete M 12 29 Nm 113 Nm 29 Nm 100° - 105° M 8 16 - 21 Nm				
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 85,5 mm; $\frac{1}{4}$: 1,50 mm				
Mot: RD28T, RD28Ti				
2,8 ltr. 85-95 kW (116-129 PS)				
Patrol 1986-2000				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*920.542*	