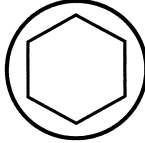
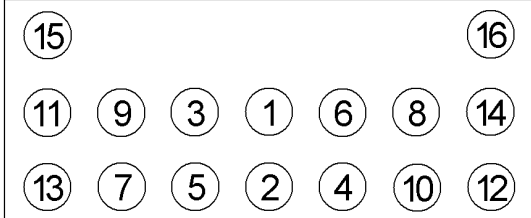


Anziehvorschrift für Zylinderkopf		920.569	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for	
Instructions de serrage pour culasse		adaptable à / adaptable a	
Prescripciones de apriete para culatas		Nissan	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 710.100			
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 29 Nm 113 Nm ☐ 29 Nm ➤ 100° - 105°	M 8 * 16 - 21 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ÷ 1,58 Ø 85,5 3 Kerben (3 notches) Mot. RD 28 T/Ti 2,8 Ltr. 2826 ccm Turbo-Diesel 85/95 kW (115/129 PS) 6 Cyl. Patrol Y 60, Y61, 260			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*920.569*	