

Anziehvorschrift für Zylinderkopf		925.140	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas		Honda		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
103168 75249				
Anziehen/ Tightening/ Serrage/ Apriete * ➤ ➤ ➤ 39 Nm 90° 90° 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 87mm ±: 0,7mm				
Mot: K20A, K20A1, K20A3				
K20A3, K20A4, K20A5				
K20A9, K24A1				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*925.140*	