

Anziehvorschrift für Zylinderkopf		986.373																
Tightening Instructions for Cylinder Head																		
Instructions de serrage pour culasse																		
Prescripciones de apriete para culatas																		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a																
		Fiat Das Original																
760.510 M 12 x 134		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																
		<table><tr><td>8</td><td>6</td><td>2</td><td>5</td><td>10</td></tr><tr><td>7</td><td>3</td><td>1</td><td>4</td><td>9</td></tr><tr><td>14</td><td>12</td><td>11</td><td>13</td><td>15</td></tr></table>		8	6	2	5	10	7	3	1	4	9	14	12	11	13	15
8	6	2	5	10														
7	3	1	4	9														
14	12	11	13	15														

Anziehen/ Tightening/ Serrage/ Apriete	* M 12 50 Nm 100 Nm ➤ 90° ➤ 90°	M 8 * 30 Nm
---	---	----------------

Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83 mm; ￼: 1,65 mm				
Mot: AR 33601, AR 67501				
146.B2.000, 146.D7.000, 149.A1.000,				
149.B1.000, 149.B3.000, 149.B4.000,				
149.B4.046, 160.A6.000, 160.A6.046,				
160.A7.000, 160.B6.046, 160.D1.000,				
176.A3.000, 176.A5.000, 176.B3.000,				

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*986.373*
--	------------------