

Anziehvorschrift für Zylinderkopf		986.381 passend für / suitable for adaptable à / adaptable a Fiat	 Das Original															
Tightening Instructions for Cylinder Head																		
Instructions de serrage pour culasse																		
Prescripciones de apriete para culatas																		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																
 760.510 M 12 x 134		<table border="1"><tr><td>8</td><td>6</td><td>2</td><td>5</td><td>10</td></tr><tr><td>7</td><td>3</td><td>1</td><td>4</td><td>9</td></tr><tr><td>14</td><td>12</td><td>11</td><td>13</td><td>15</td></tr></table>		8	6	2	5	10	7	3	1	4	9	14	12	11	13	15
8	6	2	5	10														
7	3	1	4	9														
14	12	11	13	15														
Anziehen/ Tightening/ Serrage/ Apriete		M 12 * 50 Nm 100 Nm ➤ 90° ➤ 90°																
		M 8 * 30 Nm																
Zeichenerklärung / Explanations / Explication / Explicacion																		
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos														
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)														
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo														
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera														
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro														
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 83 mm; 1/2: 1,75 mm Mot: AR 33601, AR 67501 146.B2.000, 146.D7.000, 149.A1.000, 149.B1.000, 149.B3.000, 149.B4.000, 149.B4.046, 160.A6.000, 160.A6.046, 160.A7.000, 160.B6.046, 160.D1.000, 176.A3.000, 176.A5.000, 176.B3.000,																		
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*986.381*															