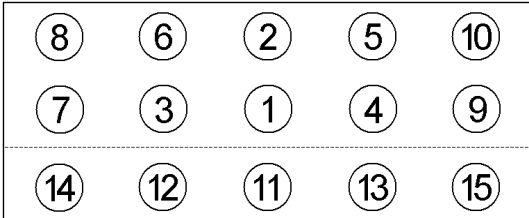


Anziehvorschrift für Zylinderkopf		986.390 passend für / suitable for adaptable à / adaptable a Fiat	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 760.510 M 12 x 134				
Anziehen/ Tightening/ Serrage/ Apriete		M 12 50 Nm 100 Nm 90° 90°		
		M 8 30 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83 mm; ✱: 1,95 mm				
Mot: AR 33601, AR 67501 146.B2.000, 146.D7.000, 149.A1.000, 149.B1.000, 149.B3.000, 149.B4.000, 149.B4.046, 160.A6.000, 160.A6.046, 160.A7.000, 160.B6.046, 160.D1.000, 176.A3.000, 176.A5.000, 176.B3.000,				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*986.390*	