



EGR VALVE PTA510-0474


TECHNICAL INFORMATION FOR INSTALLATION

ATTENTION!

The EGR valve PTA510-0474 **must be installed in energised condition, otherwise it will be damaged.**

1. Before installation, connect the plug housing of the EGR valve to the related electrical connection on the vehicle.
2. Suitable vehicle diagnostic device must be coupled with OBD connector of the vehicle.
3. Select menu function „Replacement EGR valve“.

The EGR valve is now powered [EGR valve plate moves slightly into the valve housing] and can now be mounted on the EGR cooler.

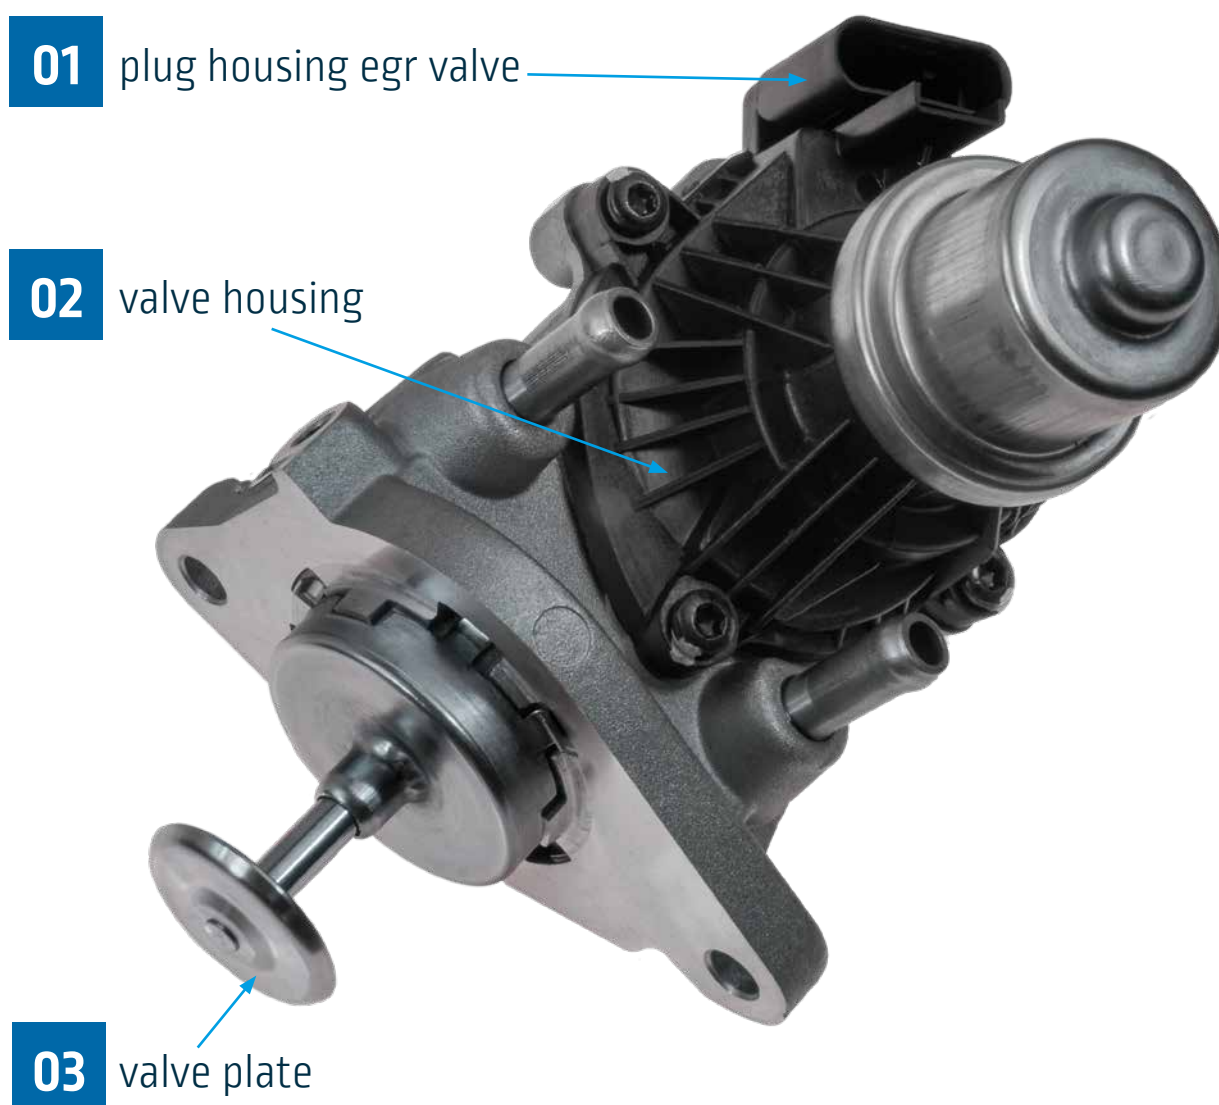

In case of inobservance damages of the electronic system can occur!