INJECTOR CAP MUST BE REMOVED BEFORE FITTING AS SHOWN IN THE IMAGES BELOW



PLEASE USE A SAFE AND SUITABLE METHOD TO REMOVE THE CAP WITHOUT DAMAGING THE NOZZLE



