

Bremskolbenrücksteller / Brake Piston Tool



ALLGEMEINE INFORMATION

Zum Zurückdrehen der Bremskolben, bei Bremsbelagwechsel, an Bremssätteln, mit bremskolbenaktivierter Handbremse.

ANWENDUNG


- 1 Bremssattel demontieren
- 2 Beide Bremsbeläge entfernen. Sollte die Reparatur außerhalb des Fahrzeugs durchgeführt werden, spannen Sie den Sattel in Schraubstock ein.
- 3 Überprüfen Sie welche Werkzeugseite am besten mit der Kolbenfläche übereinstimmt.
- 4 Platzieren Sie die „Nasen“ am Werkzeug in die Schlitzte oder Bohrungen am Kolben.
- 5 Drehen Sie die Kolben unter Ausübung nach innen gerichtetem Druck. Beachten Sie die Bewegung des Kolbens, um sicherzustellen, dass dieser in den Bremssattel zurückgedreht wird. Einige Kolben werden durch Linksdrehung betätigt. Drehen Sie weiter, bis der Kolben anstößt.

GENERAL INFORMATION



For rotating the parking brake activated piston back into the caliper cylinder when replacing brake pads.

INSTRUCTIONS

- Remove caliper
-
- Remove both brake pads.
If repairs are to be done off the car, hold the caliper in vise.
-
- Inspect piston to determine which face of tool will provide best matching accuracy.
-
- Place the tips of tool in holes or slots in piston.
-
- Turn Piston while exerting inward pressure on piston. Note the movement of piston to be sure that it is retracting into the caliper. Some pistons are actuated by left-hand threads. Continue to turn the piston until it bottoms out.

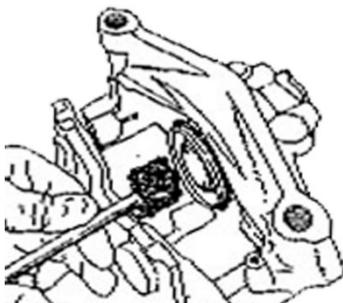

Bremskolbenflächen

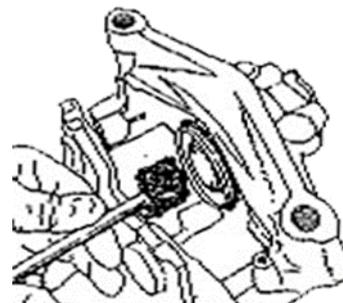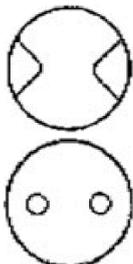

Brake Piston Surfaces

