



Anziehvorschrift für Zylinderkopf		018.000 passend für / suitable for adaptable à / adaptable a VW / AUDI	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

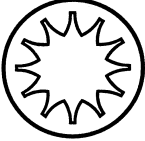

130.110
M 12x1,5x159

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

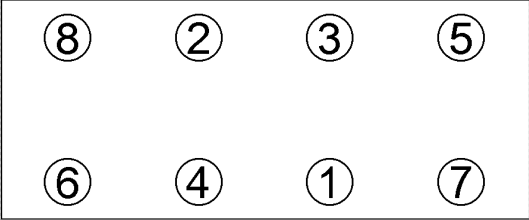

Anziehen/	*	35 Nm
Tightening/		60 Nm
Serrage/	➤	90°
Apriete	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 ✚ 1,15 mm, Ø 84 mm, 2 Löcher/holes/trous/agujeros
 Cyl. 1-3

 Mot.: ASB, BKN, BKS, BMK, BNG, BPP, BSG, CAPA
 2,7 ltr./3,0 ltr. V6 Diesel

 A4, A5, A6, A8, Q7 Phaeton, Touareg

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*018.000*
--	------------------