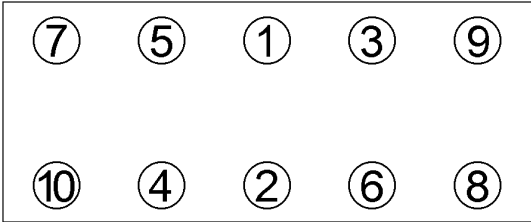


Anziehvorschrift für Zylinderkopf		019.331		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a BMW			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
Anziehen/ Tightening/ Serrage/ Apriete	* □ ➤ ➤	70 Nm 180° 50 Nm 120° 120°			
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✚ 1,65 mm, Ø 84,7 mm, 3 Löcher/holes/trous/ agujeros/fori					
Mot.: N47N/S D20					
F20, E90/E91/E92/E93, E84, F10/F11, F25 R55/R56/R57/R58/R60 Mini Cooper D,SD 2.0					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*019.331*		