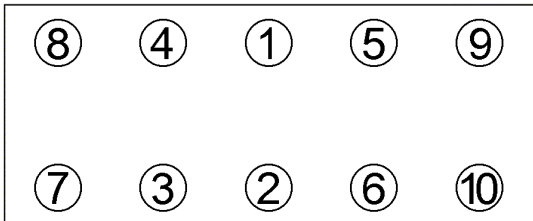


Anziehvorschrift für Zylinderkopf		025.441 passend für / suitable for adaptable à / adaptable a Renault/Volvo	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 156.700 M 12x1,75x157			
Anziehen/ Tightening/ Serrage/ Apriete	* ● ➤	Renault: 20 Nm 60 Nm 3 min 150°	Volvo: * 20 Nm 60 Nm 130°
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Wärmelauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø 85 mm			
Mot.: N7Q 700/704/710/711, B4184S/S3, B4204S/T 1,8 ltr. - 2,0 ltr. 16 V			
Laguna, Safrane, S40, V40			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*025.441*	