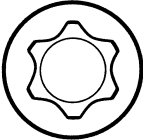
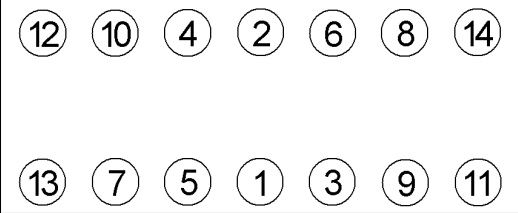


Anziehvorschrift für Zylinderkopf		058.193	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		BMW	
		Das Original	
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
234.640 M 12x1,5x217			
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	80 Nm 50 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. M57N2 D30 02/2006➔ E90/E91/E92/E93 325d, 330d,xd, 335d E60/E61 525d,xd, 530d,xd 535d E63/E64 635d E65/E66 730d,Ld E83 X3 3.0d,sd E70 X5 3.0d,sd E71 X6 30dX, 35dX ✱ 1,67 mm 3 Löcher, Holes, Trous, Agujeros, Fori			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*058.193*	