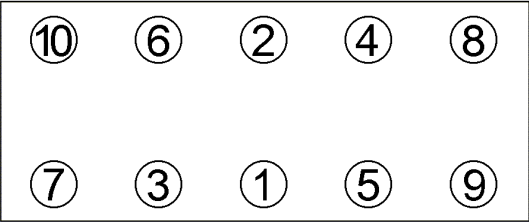


Anziehvorschrift für Zylinderkopf		061.202 passend für / suitable for adaptable à / adaptable a Cadillac/Lancia/Saab	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo  497.410 M 12X1,25X224	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 
---	--

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	65 Nm 90° 90° 90°
---	------------------	----------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

✚ 1,15 mm, Ø 83 mm, 2 Löcher/holes/trous/agujeros fori

Mot.: 844 A1.000, A19DTR, Z19DTR
 132/140 KW (180/190 PS)

BLS, Delta, Saab 9-3, 9-5

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*061.202*
--	------------------