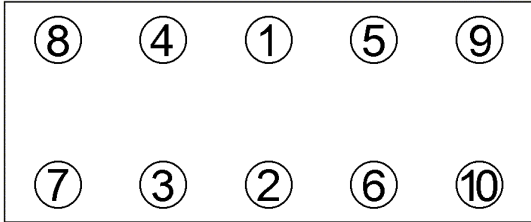


Anziehvorschrift für Zylinderkopf		075.860	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Citroën, Peugeot		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
267.550 M12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 60 Nm ➤ 220°			
Zeichenerklärung / Explanations / Explication / Explicacion				
* ➤	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 1,5 mm, Ø 86 mm, 5 Kerben/notches/encoches/muescas				
Mot.: DW10 TD/UTD/ATED/BTED, RHS, RHV, RHX, RHZ 2,0 Ltr. HDi Diesel				
Berlingo, C5, Evasion, Jumper, Jumpy, Xantia, Xsara, Ducato, Scudo, Ulysse, Zeta, 206, 306, 307, 406, 407, 607, 806, Boxer, Expert, Partner, Grand Vitara				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*075.860*		