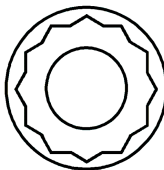
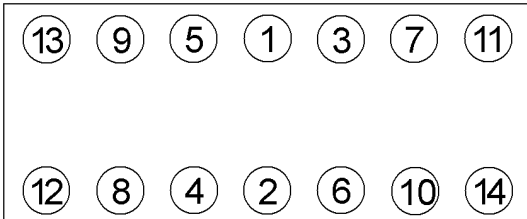


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		082.734 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 060.190 M 16 x 149			
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 70 Nm 170 Nm 280 Nm ➤ 90° ➤ 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ✚ 1,2 mm, Ø 103,5 mm Mot.: OM 906			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*082.734*	