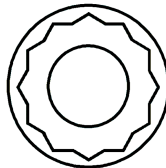
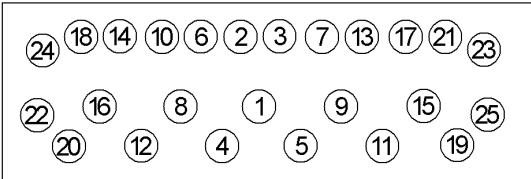


Anziehvorschrift für Zylinderkopf		089.184 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
820.075 M 12x1,75x111				
Anziehen/ Tightening/ Serrage/ Apriete	OM 322, OM 352 OM 353, OM 363 OM 366 > Mot. 071683	OM 366 Mot. 071684 >		
* 60 Nm	60 Nm	* 60 Nm		
★ 80°C	80°C	90 Nm		
110 Nm	110 Nm	120 Nm		
500 km	500 km	➤ 90°		
□ 110 Nm	110 Nm			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,2 mm, Ø 98,5 mm				
Mot.: OM 322, OM 352, OM 366				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*089.184*		