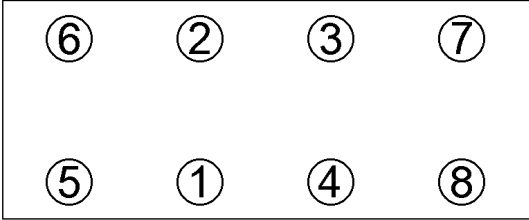


Anziehvorschrift für Zylinderkopf		123.032 passend für / suitable for adaptable à / adaptable a Citroën/Peugeot/Renault	 Das Original												
Tightening Instructions for Cylinder Head															
Instructions de serrage pour culasse															
Prescripciones de apriete para culatas															
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete													
 152.570 M 10x1,5x148															
<table border="0"> <tr> <td>Anziehen/</td> <td>✱</td> <td>20 Nm</td> </tr> <tr> <td>Tightening/</td> <td>☐</td> <td>15 Nm</td> </tr> <tr> <td>Serrage/</td> <td>➤</td> <td>225°</td> </tr> <tr> <td>Apriete</td> <td></td> <td></td> </tr> </table>				Anziehen/	✱	20 Nm	Tightening/	☐	15 Nm	Serrage/	➤	225°	Apriete		
Anziehen/	✱	20 Nm													
Tightening/	☐	15 Nm													
Serrage/	➤	225°													
Apriete															
Zeichenerklärung / Explanations / Explication / Explicacion															
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos											
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)											
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo											
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera											
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro											
Motortyp / Engine type / Type de moteur / Tipo de motor ✱ 0,74 mm, Ø 89 mm, rechts/right/droite/derecha Mot.: ES9J4S, ES9A, XFV, XFW, XFX, L7X 710, 721, 731-733, 760 3,0 ltr. V6 150-166 KW C5, C6, C8, Ulysse, Phedra, 406, 807 Avantime, Clio															
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*123.032*													