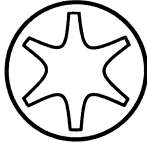
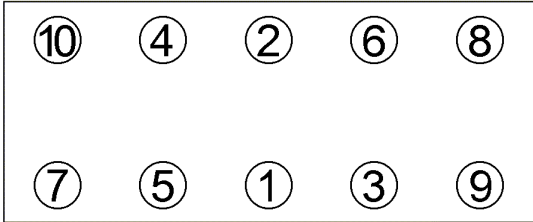


Anziehvorschrift für Zylinderkopf		123.482 passend für / suitable for adaptable à / adaptable a Ford	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 802.870 M 10 x 102			
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 40 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 86 mm; $\frac{1}{8}$: 0,60 mm			
Mot: EDDB;EDBB;EDBC;EDBD;EDDB;EDDC;EDDD EDDF;HMDA;NGA;NGB;NGC;NGD;YF 2,0 ltr. Zetec; 91-100 KW (124-136 PS) Focus 01/1999➔; Mondeo 01/1999➔10/2000 Maverick 09/2002➔; Mazda Tribute 03/2000➔			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*123.482*	