


Anziehvorschrift für Zylinderkopf		123.601 passend für / suitable for adaptable à / adaptable a PSA/Renault	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

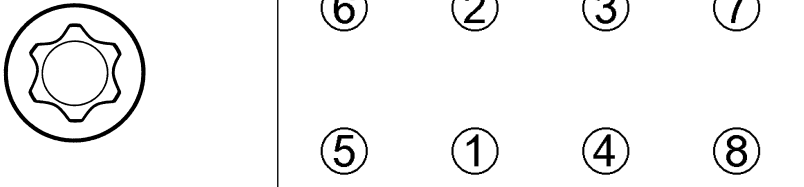

152.570
 M 10x1,5x148

Anziehen/	✱	18-22 Nm
Tightening/	☐	13-17 Nm
Serrage/	➤	225°
Apriete		

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 ✱ 0,95 mm, Ø 89 mm, links/left/gauche/izquierda

 Mot.: ES9J4S, ES9A, XFV, XFW, XFX,
 L7X 710, 721, 731-733, 760
 3,0 ltr. V6 150-166 KW

 C5, C6, C8, Ulysse, Phedra, 406, 807
 Avantime, Clio

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*123.601*
--	------------------