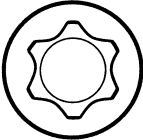
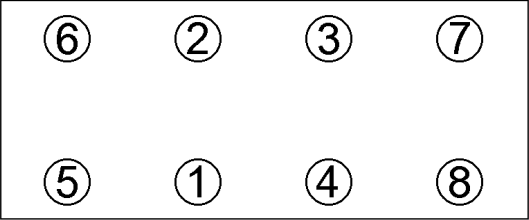


Anziehvorschrift für Zylinderkopf		123.681		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		PSA/Renault		
		Das Original		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
152.570 M 10x1,5x148				
Anziehen/ Tightening/ Serrage/ Apriete	☒ 20 Nm ☐ 15 Nm ☒ 225°			
Zeichenerklärung / Explanations / Explication / Explicacion				
☒	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
☒	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
☒	Setzzeit	relaxation time	durée de tassement	tiempo de espera
☒	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 1,65 mm, Ø 89 mm, rechts/right/droite/derecha				
Mot.: ES9J4, XFZ, L7X 700,701,713,727 3,0 ltr. V6 24V, 150 KW (190 PS)				
Xantia, XM, 406, 605 Espace, Laguna, Safrane				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*123.681*		