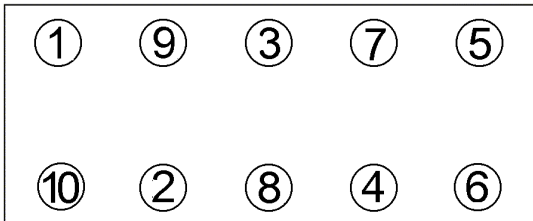


Anziehvorschrift für Zylinderkopf		137.681 passend für / suitable for adaptable à / adaptable a Chrysler / Jeep / Dodge	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
906.110 M14x155x1,5			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	15 Nm 30 Nm 85° 85° 85°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 1,2 mm, Ø 95 mm, 1 Loch/hole/trou/agujero			
Mot.: ENS, VM RA28 DOHC			
Jeep Wrangler, Liberty Dodge Nitro Chrysler Grand Voyager			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*137.681*	