


Anziehvorschrift für Zylinderkopf		146.806	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Opel	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	

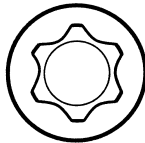

804.910
M 12 x 235

8	4	1	5	9
7	3	2	6	10

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤ ➤	25 Nm 65° 65° 65° 65° 15°
---	----------------------------	--

Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor			
✱ 1,2 mm, Ø 85,5 mm			
Mot.: X 20 DTH/DTL, Y 20 DTH/DTL, X 22 TH, Y 22 DTH/DTR			
Astra, Frontera, Omega, Signum, Vectra, Zafira Saab 9-3, 9-5			

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*146.806*
--	------------------