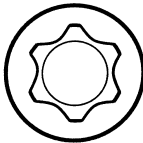
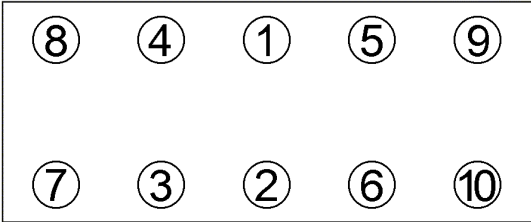


Anziehvorschrift für Zylinderkopf		146.828 passend für / suitable for adaptable à / adaptable a Opel	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
804.910 M 12 x 235				
Anziehen/ Tightening/ Serrage/ Apriete	* 25 Nm ➤ 65° ➤ 65° ➤ 65° ➤ 65° ➤ 15°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,3 mm, Ø 85,5 mm, 2 Löcher/holes/trous/ agujeros				
Mot.: X 20 DTH/DTL, Y 20 DTH/DTL, X 22 TH, Y 22 DTH/DTR				
Astra, Frontera, Omega, Signum, Vectra, Zafira Saab 9-3, 9-5				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*146.828*		