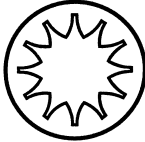
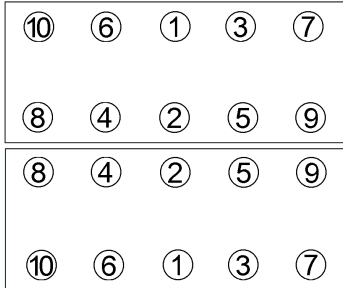


Anziehvorschrift für Zylinderkopf			149.354		 Das Original		
Tightening Instructions for Cylinder Head			passend für / suitable for				
Instructions de serrage pour culasse			adaptable à / adaptable a				
Prescripciones de apriete para culatas			Audi				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
 130.120 M12x1,5x159							
Anziehen/ Tightening/ Serrage/ Apriete			* 35 Nm 60 Nm ➤ 90° ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion							
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves		emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C)		calentamiento (80°C)	
□ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement		tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage		ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor							
✚ 1,2 mm, Ø 83,8, 3 Löcher/holes/trous/agujeros Cyl. 5-8							
Mot.: BVN, BMC, BTR, CEMA 4,2 Ltr. TDI							
Audi A8, Q7							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*149.354*			