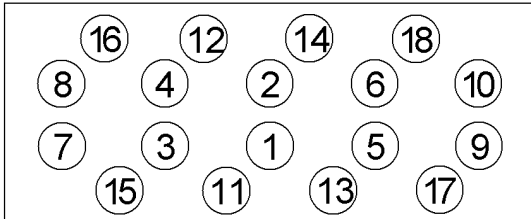


Anziehvorschrift für Zylinderkopf		156.221 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
733.100 M 10x140/M 8x121				
Anziehen/ Tightening/ Serrage/ Apriete		Pos. 1-10: 10 Nm Pos. 11-18: 5 Nm Pos. 1-10: 20 Nm Pos. 11-18: 10 Nm Pos. 1-10: 40 Nm Pos. 11-18: 20 Nm ➤ Pos. 1-18: 180°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ford Transit 2,2 TDCi (Duratorq) 85/110/115/130/140 PS Dicke 1,20/3 Kerben 04.2006 >				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*156.221*	