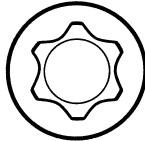
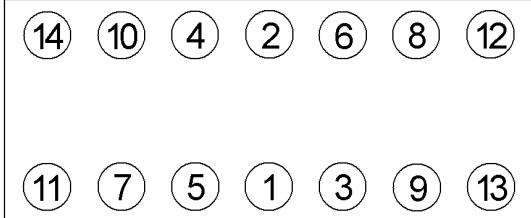


Anziehvorschrift für Zylinderkopf		157.430		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas		BMW			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
 802.801 M 12x1,5x147					
Anziehen/ Tightening/ Serrage/ Apriete		* 80 Nm ☐ 50 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
☒	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
☒	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
☒	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
☒	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
÷ 1,65 mm 3 Löcher, Holes, Trous, Agujeros, Fori					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*157.430*		