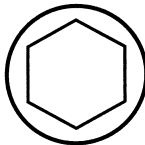


Anziehvorschrift für Zylinderkopf		181.470	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Opel		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
	⑦ ③ ② ⑥ ⑩ ⑧ ④ ① ⑤ ⑨			
803.050 M 12x1,5x102				
Anziehen/ Tightening/ Serrage/ Apriete		40 Nm 60°-75° 60°-75°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
- / 1,50 mm , 2 Löcher				
1,5 Ltr. Diesel, 37/49 kW (50/66 PS)				
Mot.4EC1, T4EC1 (OHC)				
Corsa, Kadett, Nova ab 1987				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*181.470*	