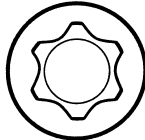


Anziehvorschrift für Zylinderkopf		193.222	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Peugeot		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
	⑧④①⑤⑨ ⑦③②⑥⑩			
758.300 M 10x1,5x175,5				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 120° 120°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 76 mm, ± 1,47 mm				
Mot. TU 3M/MC, TU 3F/F2/FM 1360 ccm				
Guß-Block/cast iron/bloc fonte				
Citroën AX,BX,C 15,ZX				
Peugeot 106,205,305,306				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*193.222*	