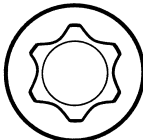
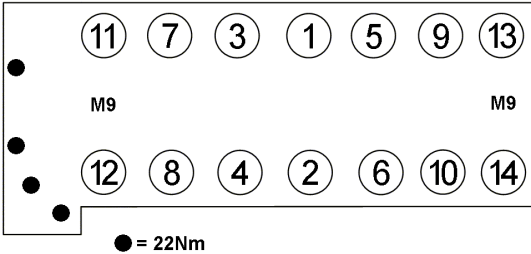


Anziehvorschrift für Zylinderkopf		217.590	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a BMW		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ * 30 Nm Pos. 1-14				
Tightening/ ➤ 90° Pos. 1-14				
Serrage/ ➤ 90° Pos. 1-10				
Apriete ➤ 45° Pos. 1-14				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. N54 B30 ✱ 1,52mm (+0,3)				
E82/E88 135i, M Coupe				
E90/E91/E92/E93 335i,xi,is				
E60/E61 535i,xi USA				
F01/F02 740i,Li				
E71 X6 35iX				
E89 Z4 35i,is				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*217.590*	