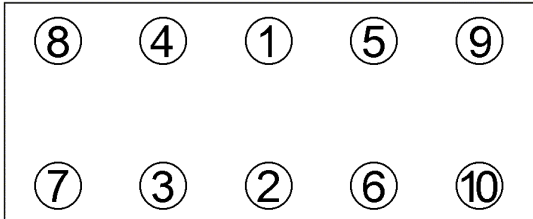


Anziehvorschrift für Zylinderkopf		228.521 passend für / suitable for adaptable à / adaptable a PSA	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 267.551 M12x1,5x121				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	Pos. 1-10: 20 Nm Pos. 1-10: 60 Nm Pos. 1-10: 220°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 86,5 mm; $\frac{1}{2}$: 1,30 mm Mot: DW10FC, DW10FCD, DW10FD 2.0 BlueHDi 308, 3008, 508, 5008				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*228.521*	