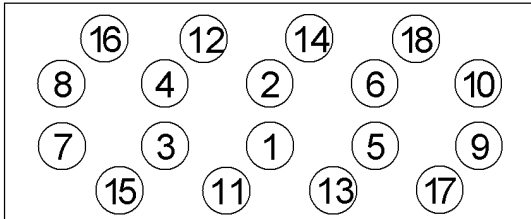


Anziehvorschrift für Zylinderkopf		265.421 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 175.580 M 10x159,5/M8x121				
Anziehen/ Tightening/ Serrage/ Apriete		Pos. 1-10: 10 Nm Pos. 11-18: 5 Nm Pos. 1-10: 20 Nm Pos. 11-18: 10 Nm Pos. 1-10: 40 Nm Pos. 11-18: 20 Nm ➤ Pos. 1-18: 180°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 91 mm; 𐀀: 1,10 mm 1 Zahn/1 Tooth				
Mot: D2FA; D2FB; D2FE; D4FA; DOFA; F4FA FXFA; H9FA 2,4 ltr. Di/TDE 55-101 KW (75-137 PS)				
Transit Diesel		ab 1999➔		
Transit Di/TDE FT 330/350/430		ab 2000➔		
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*265.421*		